

Product number: 3300495



 
Materials

Fabric: 1 panel, width 110cm(43.3in) x 60cm(23.6in) Lining: width 110cm (43.3in) x 60cm(23.6in) Fusible interfacing: width 110cm(43.3in) x 60cm(23.6in)


Unit: cm and inches

Attach the fusible interfacing to the wrong side of the fabric

1. Fold the handle on the long side, then stitch both sides.




 2. Baste the handle to the outer bag fabric





* Baste the other handle to the bag as well

5. Place the outer and inner bag fabric together, right side in. Sew the bag opening.

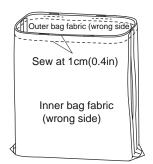

 
6. Pull the right side out and close the opening.



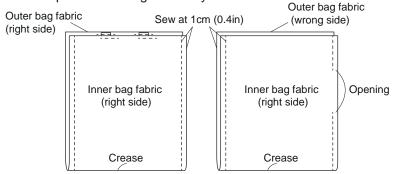

Inner bag fabric (right side) Stitch the bag opening, Stitch at 0.2cm (0.08in) Outer bag fabric (right side)

4. Separate the seams, fold the bag bottom to the sewing line on the sides. Make the gussets.

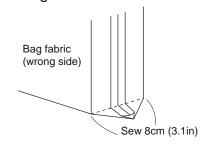

Unauthorised reproduction this material is prohibited

